

REPAMAX[®]

WIDE-RANGE COUPLING OR REPAIR CLAMP RANGE 32mm (SIZES 150-600mm)



INSTALLATION INSTRUCTIONS


DO NOT DISASSEMBLE THE COUPLING. DO NOT LUBRICATE THE BOLTS.

THE REPAMAX COUPLING MAY BE USED AS A NON-RESTRAINING STAB TYPE COUPLING OR A WRAPAROUND FULL CIRCLE REPAIR CLAMP.

NOTE: REPAMAX HAS LIMITED TRANSITION CAPABILITIES. WHEN INSTALLED ACCORDING TO INSTALLATION INSTRUCTIONS, THE REPAMAX RANGE 32mm CAN TRANSITION BETWEEN TWO PIPE ENDS WITH A MAXIMUM OUTSIDE DIAMETER DIFFERENCE AS INDICATED ON THE PRODUCT LABEL.

NOTE: THE REPAMAX HAS A 2-LAYER GASKET. ONE OF THE LAYERS CAN BE REMOVED TO FIT A WIDER RANGE OF PIPES. SHOULD REMOVAL OF THE INNER LAYER GASKET BE REQUIRED, IT MUST BE REMOVED FROM BOTH ENDS OF THE REPAMAX. IF THE INNER LAYER OF THE SEALING GASKET IS REMOVED ON ONE END OF THE PRODUCT BUT NOT THE OTHER, THE PRODUCT MIGHT NOT SEAL PROPERLY AND THE PRODUCT WARRANTY IS VOIDED.


STEP 1

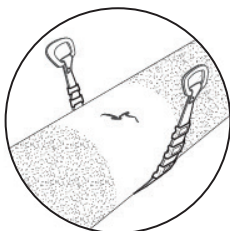

Prepare both pipe ends of the existing pipe by descaling if required. Clean the pipe as required using water. Make sure that the pipes are clear from debris and defects that may interfere with the REPAMAX'S proper seal.

NOTE: Except steel, PVC, and PE pipes, all rough-surfaced pipes must be lubricated with a water-based gasket lubricant in order to achieve a proper seal.

STEP 2

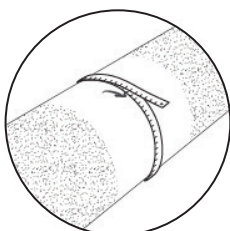

Measure the pipe's outer diameter and make sure the coupling's size will fit the pipe properly.


NOTE: Each coupling's size range is shown on the product's label. Ensure that the pipe is not out of round and is free of scratches, dents, flats or other defects which may interfere with the coupling's proper seal. The coupling may not fit well or function properly on pipe which is out of round or damaged.

STEP 3

Unpack and carefully remove the coupling from its packaging. Handle with care to prevent damage to the coupling. Do NOT use any kind of hammer to move it into position! Proper sizing will allow the coupling to go on easily.

STEP 4

Size the gasket. This REPAMAX has two gaskets; a removable inner gasket and a hydraulically-assisted outer gasket. The inner gasket can be removed to accommodate larger OD pipes. DO NOT remove the inner gasket unless the OD falls within the upper range of the coupling. The proper range sizes are shown on the product label. If the inner layer of the gasket must be removed fold the inner layer, break the parting line by inserting a screwdriver between the two layers, and pull the layer out of the coupling.

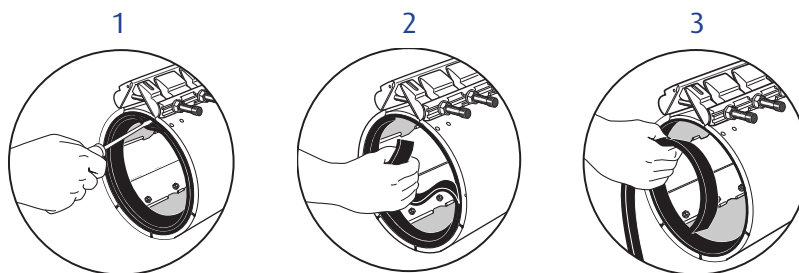


NOTE: Measure the OD of the pipe **TWICE** using an OD tape! Once the inner gasket is removed it can NOT be re-installed!

NOTE: If using REPAMAX as a repair clamp, proceed to step 5.
If using as a stab type coupling, proceed to step 11.

REPAIR CLAMP INSTRUCTIONS:


STEP 5

Mark the pipe evenly on both sides of the crack according to the length of the product.

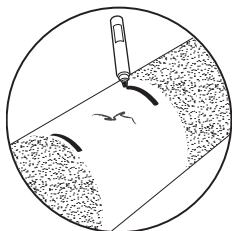


STEP 6

Open the REPAMAX by loosening the nuts (1), so they are level with the tops of the bolts. Do Not Remove THE NUTS! Partially compress the lug assembly (2), pull upwards on the lug compression beam and unlatch the lug assembly allowing the clamp to extend to a fully open position (3).

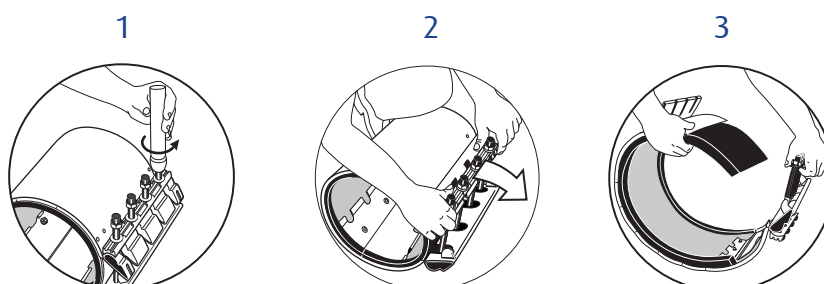


STEP 7

Position the REPAMAX around the pipe (1). Make sure that the gasket is on the surface of the pipe. At the same time, pull on the compression beam with one hand and with the other hand push on the gasket and position it (2) between the body and the internal guiding plate. If needed, use your knee (3) to support the REPAMAX against the pipe to prevent it from turning.

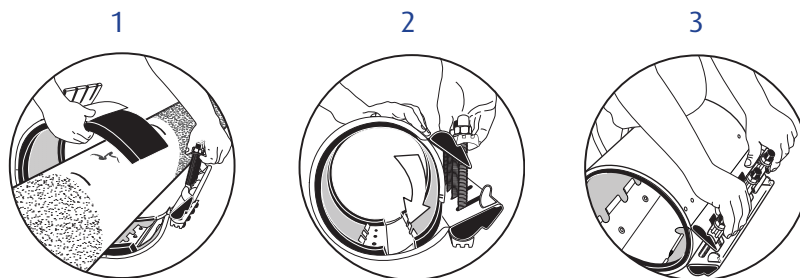

Once the REPAMAX is around the pipe, engage the compression beam until it “clicks” into the 1st closing position. The REPAMAX can now be positioned over the leak covering the marks on both sides (see step 5).


1st Closing Position

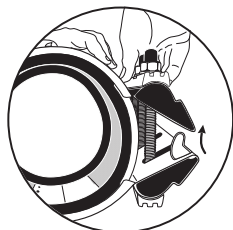

STEP 8

Once the REPAMAX is located over the leak, engage the compression until it “clicks” into the second closing position. Tighten the compression nuts, making sure the lock teeth are aligned with their guiding slots (see drawing 2).

2nd and final Closing Position

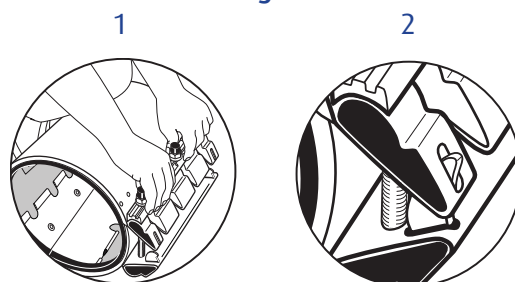

INSTALLATION INSTRUCTIONS


REPAMAX® WIDE-RANGE COUPLING OR REPAIR CLAMP

RANGE 32mm (SIZES 150-600mm)

STEP 9

Tighten all of the nuts evenly, working from the center of the lug assembly towards the end of the REPAMAX. Verify again that all nuts are closed to the torque specified on the product label.

NOTE: Do not lubricate bolts as this will void product warranty.

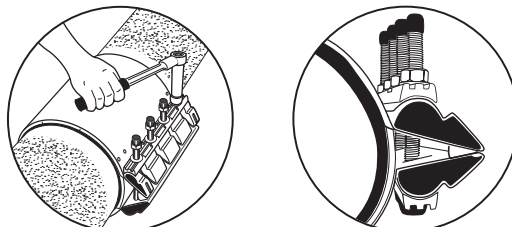


STEP 10

Recharge the line and check for leaks. If any leakage across the seal end is evident, reduce the pressure in the line and increase the labeled torque of the bolts by up to 50%.

STAB TYPE COUPLING INSTRUCTIONS:

STEP 11


Mark the pipe ends to the proper minimum stab depth as indicated on the product label.

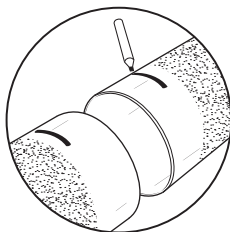

STEP 12


Make sure that the pipe is properly supported.

NOTE: The REPAMAX is not designed to carry the weight of the pipe by itself.

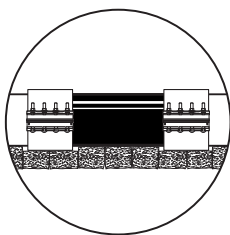

STEP 13

Position the coupling: Place the couplings on the replacement pipe (one coupling on each end) and lower the pipe and couplings into the ditch. Slide the couplings outward so that they are centered over the area to be joined covering the marks on the pipe (see step 11). Make sure that the pipes are not touching each other inside the body of the REPAMAX. There must be space between the pipes in order for continuous dynamic deflection (CDD) to take place.

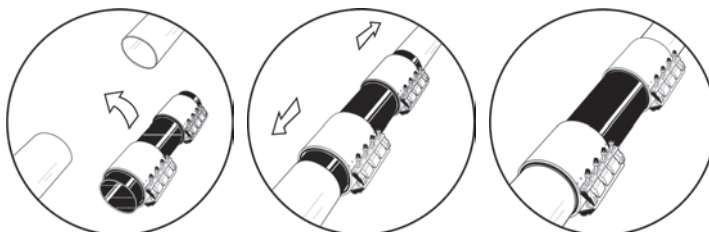

INSTALLATION INSTRUCTIONS

REPAMAX® WIDE-RANGE COUPLING OR REPAIR CLAMP


RANGE 32mm (SIZES 150-600mm)

STEP 14

Tighten all of the nuts evenly, working from the center of the lug assembly towards the end of the REPAMAX. Verify again that all nuts are closed to the torque specified on the product label.



NOTE: Do not lubricate bolts as this will void product warranty.

NOTE: use of a torque wrench is mandatory. The torque wrench will verify the proper torque has been achieved.

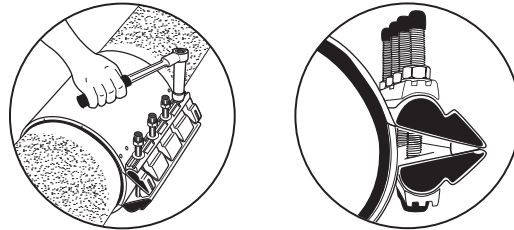

STEP 15

Recharge the line and check for leaks. If any leakage across the seal end is evident, reduce the pressure in the line and increase the labeled torque of the bolts by up to 50%.
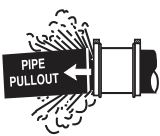
<p>⚠ WARNING</p> 	<p>This product does not restrain axial pipe movement. Proper anchorage of the pipe is required if this product is used as a coupling. Failure to anchor the pipe ends could result in the escape of line content, and may cause property damage, serious injury or death.</p>	<p>⚠ WARNING</p> 	<p>Caution: This product is not intended for use on natural gas piping, or any other type of gas piping. To do so could result in escaping gas that could ignite and cause property damage, serious injury or death.</p>
---	--	--	---



6 Hapatish St. Tel Aviv, Israel 6655906

TEL: (+972) 3-515-4014

FAX: (+972) 3-682-1572

info@krausz.com | www.krausz.com